



Model: OM509-LS

Smoke Alarm Troubleshooting Guide

PROBLEM	CAUSE	SOLUTION
Smoke alarm does not respond when Test button depressed.	Deactivator magnet is still in place on back of alarm.	Check that the small magnet in the back of the alarm has been removed. Once removed, it should still be stored within the cavity between the alarm and mounting bracket for future use to deactivate the alarm.
Red LED flashes and the alarm sounds one beep every 43 seconds.	<ol style="list-style-type: none">1. Cold air temperature $<6^{\circ}\text{C}$.2. Battery is low.	<ol style="list-style-type: none">1. Relocate alarm to warmer location.2. The battery is not replaceable. You will need to replace the alarm.
Smoke alarm sounds unwanted alarms intermittently or when residents are cooking, taking showers, etc.	<ol style="list-style-type: none">1. Alarm has dust or insect inside casing.2. Alarm is incorrectly located.	<ol style="list-style-type: none">1. Clean the alarm by gently vacuuming all openings around the outside of the alarm using your household vacuum's soft brush attachment.2. Move alarm away from kitchen or bathroom/laundry areas where cooking fumes or steam can trigger the alarm.